

**Atlante Informatica S.r.l.**



Via Don Giovanni Minzoni, 4 – Moncalieri (TO)  
Tel.: +3901119827159 - Fax: +3901119837759  
[info@atlanteinformatica.com](mailto:info@atlanteinformatica.com) – [www.atlanteinformatica.com](http://www.atlanteinformatica.com)

## **Firewall Entry Level**



**Manuale utente  
User manual**

Ver.: 1.0ZS072013

## AFEL Family



### Specifiche tecniche / Technical specifications

- CPU: Geode 500 MHz
- RAM: 256MB
- USB: 2 USB 2.0 port
- SERIAL: 1 Serial port (9600 Baud, 8bit, 1 stop bit, parity none)
- WiFi: Compex WLM54AG, 802.11 a/b/g 23dBm @ 2.4/5GHz (200mW) (optional)
- 3G: 3G HSPA module, GSM/UMTS 800/850/1900/2100 (optional)

Modello/Model	CF	NIC	WiFi	3G	Colore/Color
AFEL2R512-12	512	2	-	-	rosso/red
AFEL3R2-11	2048	3	-	-	rosso/red
AFEL3B2-11	2048	3	-	-	nero/black
AFEL3R4-11	4096	3	-	-	rosso/red
AFEL3B4-11	4096	3	-	-	nero/black
AFEL3R4W-11	4096	3	1	-	rosso/red
AFEL3B4W-11	4096	3	1	-	nero/black
AFEL2R4SIM-13	4096	2	-	1	rosso/red
AFEL11G4W-13	4096	1	1	-	grigio/gray
AFEL12G4W-13	4096	1	2	-	grigio/gray

## Italiano

### Prima configurazione del firewall

- assegnare al proprio PC l'indirizzo IP 192.168.0.2/24
- collegarsi tramite cavo di rete alla prima NIC a destra, vicina alla porta USB
- collegare l'alimentazione al dispositivo
- accedere tramite browser alla seguente pagina  
<https://192.168.0.75/>

### Dati di accesso:

- Username: admin
- Password: zershell

## English

### First firewall configuration

- set the IP address 192.168.0.2/24 on the PC
- connect the LAN cable in the first right NIC near to the USB port
- switch on the device by connecting it to the power supply
- you can have access to it at the web management page using the below URL:  
<https://192.168.0.75/>

### Default access data:

- Username: admin
- Password: zershell