

## PRIMA CONFIGURAZIONE FIREWALL

---

- Assegnare al proprio PC l'indirizzo IP 192.168.1.2/24 o lasciare l'interfaccia in DHCP
- Collegarsi tramite cavo di rete alla prima NIC a destra, indicata con la freccia nella foto seguente:



- Collegare all'alimentazione al dispositivo.
- Accedere tramite browser alla seguente pagina per il wizard di configurazione:  
[https://192.168.1.1/wizard.php?xml=setup\\_wizard.xml](https://192.168.1.1/wizard.php?xml=setup_wizard.xml)  
Oppure direttamente alla console: <https://192.168.1.1/>

I dati di accesso sono:

Username: admin  
Password: pfsense

## FIRST FIREWALL CONFIGURATION

---

- Set the IP address 192.168.1.2/24 on the PC or use a DHCP configuration.
- Connect the LAN cable in the first right NIC indicated in the below box with an arrow.



- Switch on the device by connecting it to the power supply.
- You can have access to it at the web management wizard using the below URL:  
[https://192.168.1.1/wizard.php?xml=setup\\_wizard.xml](https://192.168.1.1/wizard.php?xml=setup_wizard.xml)  
or without wizard:  
<https://192.168.1.1/>  
Default access data:  
Username: admin  
Password: pfsense